

# **AT820 Quick Start Guide**

Version 1.0

2013-01-21


---

<b>1. Installation and access.....</b>	<b>3</b>
□ Set up page for VOIP users only.....	3
□ Feet installation instruction.....	3
□ Check IP .....	5
□ Login to AT820's webpage .....	5
<b>2. Configure AT820 to make VoIP calls.....</b>	<b>6</b>
□ Network.....	6
□ Set password.....	6
□ SIP Settings .....	7

## 1. Installation and access

- Set up page for VOIP users only


Set up AT820 as below:

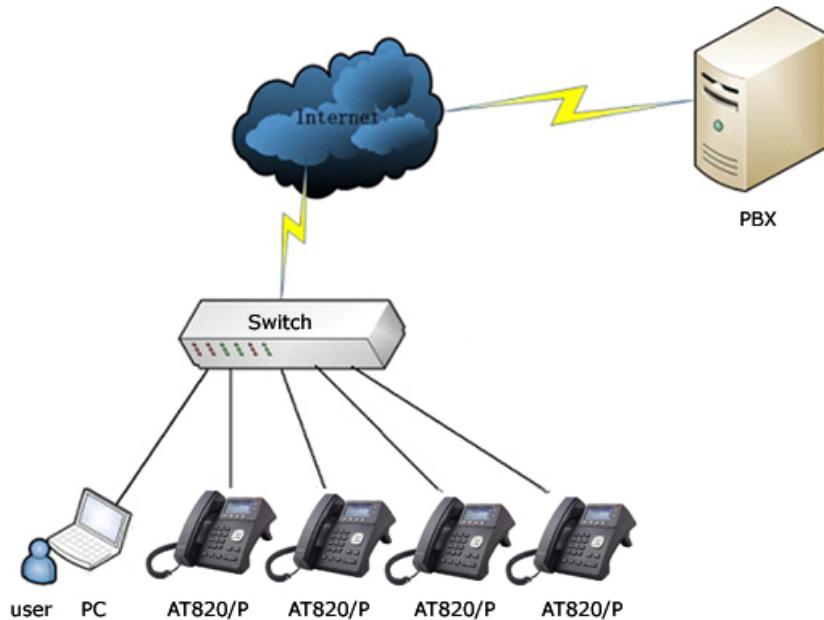


- **Feet installation instruction**

1) Desktop position:


A. Put the bottom side of the IP phone upside and press the plate with letter "PUSH" into the slot, please refer the picture as below:

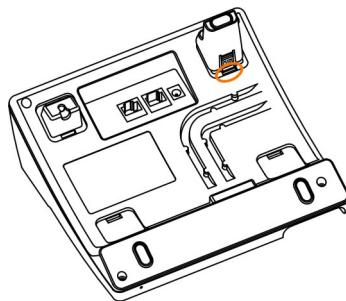

B. Press the other plate into the slot in accordance with the direction of the arrow

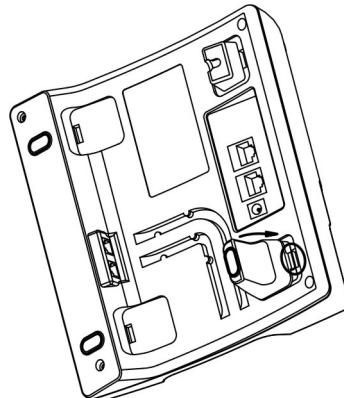


C. Repeat A and B. It is the right picture of putting on desk after fixing the two feet below:

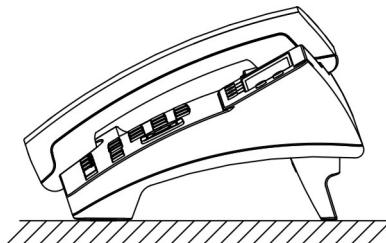


D. Disassemble the feet:

Press the plate with word "PUSH" and pull the feet with the direction of arrow. When the plate is pull out of the slot (there will be a sound of "pa") you can take off the feet

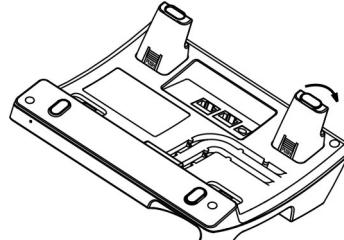


2) On wall position



A. Put the bottom side of the IP phone upside and push the plate with letter "PUSH" into the slot, please refer the picture as below:

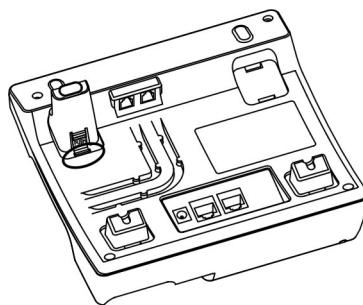

B. Push the other plate into the slot in accordance with the direction of the arrow

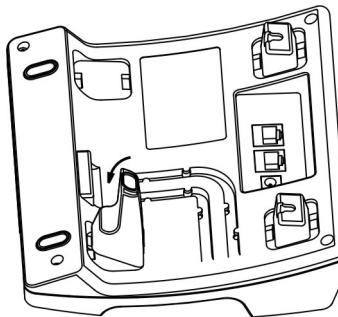


C. Repeat A and B. It is the picture of wall mounting after fixing the two feet below:

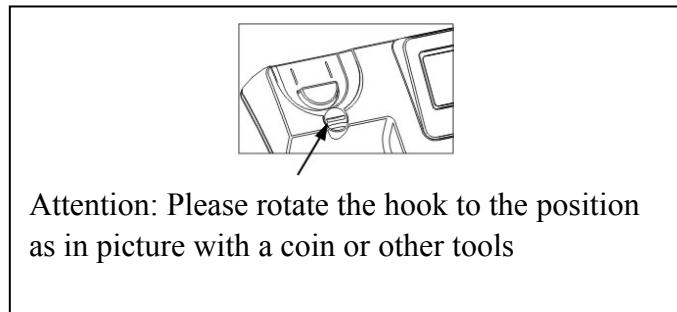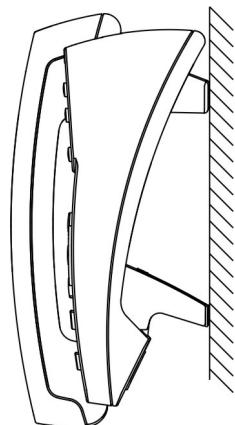

D. Disassemble the feet way:

Press the plate with word "PUSH" and pull the feet with the direction of arrow. When the plate is pull out of the slot (there will be a sound of "pa") you can take off the feet

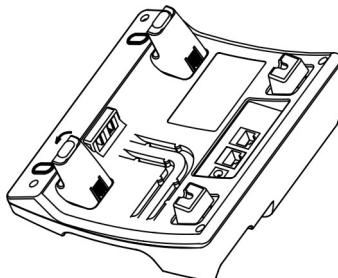

➤ **Check IP**

If AT840 is connect to your network. AT840 WAN default to use DHCP, and after connect WAN to Switch, it will obtain IP automatically. Press "Menu" and input the default password 123, select menu option "9.Network", you will see AT840's current IP.

## ➤ Login to AT820's webpage

Modify your computer's IP address to the same network as AT820. Enter AT820 IP addresses in the web browser to go to the login page, then you will access AT820's user webpage.

Click "admin" which is on the right corner to enter administrator webpage.



### Product Information

Product Name : AT820      Protocol : SIP  
Software Version : 2.2.4.12425      Hardware Version :

## 2. Configure AT820 to make VoIP calls

### ➤ Network

Enter "Network" -> "Basic" page.

There are 3 ways to connect to the internet DHCP, Static and PPPoE, please choose one according to your own situation.

System Status	Network / Basic
Network	<input checked="" type="radio"/> DHCP <input type="radio"/> Static IP  IP Address : <input type="text"/> Subnet Mask : <input type="text"/> Default Gateway : <input type="text"/> Primary DNS : <input type="text"/> Secondary DNS : <input type="text"/>  <input type="radio"/> PPPoE User Name : <input type="text"/> Password : <input type="text"/>
Account	
Phone Setting	
Update	
Phone Book	
Call Log	

- ✓ Network mode: you can choose DHCP, Static and PPPoE
- ✓ DHCP: AT820 default to use DHCP to obtain dynamic IP.
- ✓ Static: If you want to set your ip as static, you should fill ip, netmask, gateway and DNS information.
- ✓ PPPoE: If connect AT820 to modem, you should fill ADSL account and the password which assigned by your network service provider.

### ➤ Set password

Enter "Network" -> "Advance" page.

There are 2 models to set the authority of web accessing and command line: User model and Admin model. All the parameters can be visible and changed in Admin mode while part of them can be visible in User mode.

System Status		Network / Advance	
Network		Web Server Enable Web Server : <input type="button" value="Yes"/> Admin Password : <input type="text"/> User Password : <input type="text"/> HTTP Port : <input type="text" value="80"/> <b>VPN</b>	
SIP Setting			
Account			
Phone Setting			
Update			
Phone Book			
Call Log			

- ✓ Enable Web Server: enable or disable web access. If choose "no", you can not access AT820 webpage.
- ✓ Admin password: set admin webpage access password.(username:admin)
- ✓ User password: set user webpage access password.(username:user)

### ➤ SIP Settings

Enter "Account" -> "Account1" page.

System Status		Account / Account 1	
Network			
SIP Setting		<b>SIP</b> Enable : <input type="button" value="Yes"/> Display Name : <input type="text" value="5066"/> User ID : <input type="text" value="5066"/> Authenticate ID : <input type="text"/> Password : <input type="text"/> SIP Server : <input type="text" value="172.16.0.55"/> SIP Port : <input type="text" value="5068"/> Use Outbound Proxy : <input type="button" value="No"/> Outbound Proxy Server : <input type="text"/> Outbound Proxy Port : <input type="text" value="5060"/> Register Expires : <input type="text" value="300"/> Subscribe Expires : <input type="text" value="3600"/> Transport Type : <input type="button" value="UDP"/> SIP 100Rel Require : <input type="button" value="No"/>	
Account			
Phone Setting			
Update			
Phone Book			
Call Log			

- ✓ Enable: whether enable this sip register.
- ✓ Display Name: This name will display on your screen. It will show the User ID instead if leave display name as blank.
- ✓ User ID: Username of sip account.
- ✓ Authenticate ID: normally is the same with User ID, can also leave it as blank if there is no special requirement from your sip server.

- ✓ Password: Password of sip account.
- ✓ Sip Server: SIP server address , support both IP address and domain name.
- ✓ Sip Port: SIP server port , default is 5060.
- ✓ Use Outbound Proxy: Whether to use outbound proxy.
- ✓ Outbound Proxy Server: Normally the Proxy server is the same as SIP server. If they are different then fill in the correct information that provided by ISP.
- ✓ Outbound Proxy Port: Set your proxy server port.
- ✓ Register Expires: register expire time, default is 60 seconds. AT820 will auto configure this expire time to the server recommended setting if it is different from the SIP server.
- ✓ Subscribe Expires: The Expires value in SUBSCRIBE message, default is 3600 seconds.
- ✓ Transport Type: UDP/TCP/TLS.
- ✓ SIP 100Rel Require : Require 100rel or not, default is no. If set to yes, the INVITE message sent will contain the *require:100rel* header field.

After configured and enabled register this account, please check the status of this account in System Status page.

System Status																					
Network	▼																				
SIP Setting	▼																				
Account	▼																				
Phone Setting	▼																				
Update	▼																				
Phone Book	▼																				
Call Log	▼																				
<b>Product Information</b> <table border="0"> <tr> <td>Product Name :</td> <td>AT820</td> <td>Protocol :</td> <td>SIP</td> </tr> <tr> <td>Software Version :</td> <td>2.2.4.12425</td> <td>Hardware Version :</td> <td></td> </tr> <tr> <td>Mac Address :</td> <td>00:09:45:60:50:10</td> <td>Serial Number :</td> <td></td> </tr> </table>		Product Name :	AT820	Protocol :	SIP	Software Version :	2.2.4.12425	Hardware Version :		Mac Address :	00:09:45:60:50:10	Serial Number :									
Product Name :	AT820	Protocol :	SIP																		
Software Version :	2.2.4.12425	Hardware Version :																			
Mac Address :	00:09:45:60:50:10	Serial Number :																			
<b>Network Information</b> <table border="0"> <tr> <td>Type :</td> <td>DHCP</td> <td>Current IP :</td> <td>172.16.0.105</td> </tr> <tr> <td>Current Netmask :</td> <td>255.255.255.0</td> <td>Current Gateway :</td> <td>172.16.0.1</td> </tr> <tr> <td>Primary DNS :</td> <td>202.96.134.133</td> <td>Secondary DNS :</td> <td>202.96.128.86</td> </tr> <tr> <td>Host Name :</td> <td></td> <td>Domain :</td> <td></td> </tr> <tr> <td>VPN State :</td> <td>Disable</td> <td>VPN IP :</td> <td></td> </tr> </table>		Type :	DHCP	Current IP :	172.16.0.105	Current Netmask :	255.255.255.0	Current Gateway :	172.16.0.1	Primary DNS :	202.96.134.133	Secondary DNS :	202.96.128.86	Host Name :		Domain :		VPN State :	Disable	VPN IP :	
Type :	DHCP	Current IP :	172.16.0.105																		
Current Netmask :	255.255.255.0	Current Gateway :	172.16.0.1																		
Primary DNS :	202.96.134.133	Secondary DNS :	202.96.128.86																		
Host Name :		Domain :																			
VPN State :	Disable	VPN IP :																			
<b>Account 1 Information</b> <table border="0"> <tr> <td>Registration State :</td> <td>Registered</td> <td>Proxy :</td> <td>172.16.0.55</td> </tr> <tr> <td>User ID :</td> <td>5066</td> <td>Message Waiting :</td> <td>Yes</td> </tr> <tr> <td>Last Registration At :</td> <td>01/01/2000 00:00:00</td> <td>Next Registration In :</td> <td>300 s</td> </tr> </table>		Registration State :	Registered	Proxy :	172.16.0.55	User ID :	5066	Message Waiting :	Yes	Last Registration At :	01/01/2000 00:00:00	Next Registration In :	300 s								
Registration State :	Registered	Proxy :	172.16.0.55																		
User ID :	5066	Message Waiting :	Yes																		
Last Registration At :	01/01/2000 00:00:00	Next Registration In :	300 s																		
<b>Account 2 Information</b> <table border="0"> <tr> <td>Registration State :</td> <td>Registered</td> <td>Proxy :</td> <td>172.16.0.55</td> </tr> <tr> <td>User ID :</td> <td>5067</td> <td>Message Waiting :</td> <td>Yes</td> </tr> <tr> <td>Last Registration At :</td> <td>01/21/2013 11:50:58</td> <td>Next Registration In :</td> <td>298 s</td> </tr> </table>		Registration State :	Registered	Proxy :	172.16.0.55	User ID :	5067	Message Waiting :	Yes	Last Registration At :	01/21/2013 11:50:58	Next Registration In :	298 s								
Registration State :	Registered	Proxy :	172.16.0.55																		
User ID :	5067	Message Waiting :	Yes																		
Last Registration At :	01/21/2013 11:50:58	Next Registration In :	298 s																		