

R3 Quick Start Guide

Version 2.0

2015-10-14

Content

1. Installation and access	3
1.1 Connection	3
1.2 Stand bracket installation instruction.....	3
1.3 Programmable keys' paster using instruction.....	6
1.4 Wiring instruction	7
2. Configuring phone	8
2.1 Configuring via keypad.....	9
2.2 Configuring via webpage	9
2.2.1 Login to the web	9
2.2.2 Network configuration	10
2.2.3 Account configuration.....	12

1. Installation and access


1.2 Connection

Set up R3 as below:




1.3 Stand bracket installation instruction


A. Put the bottom side of the IP phone upside and press one-side joints of stand bracket into the slot, please refer the picture as below:

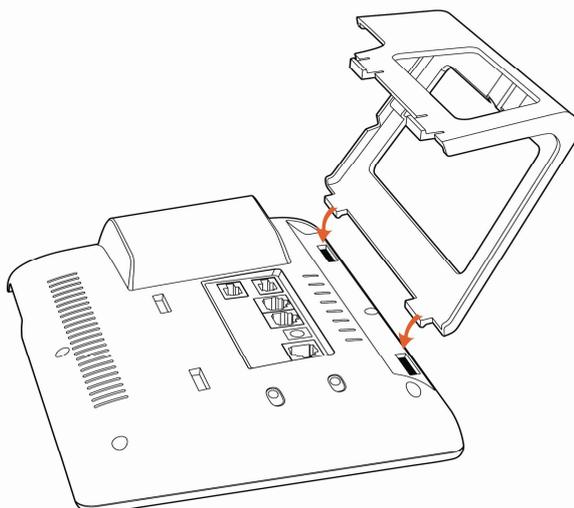

B. Press the other side joints into the slot according to the direction of the arrow:

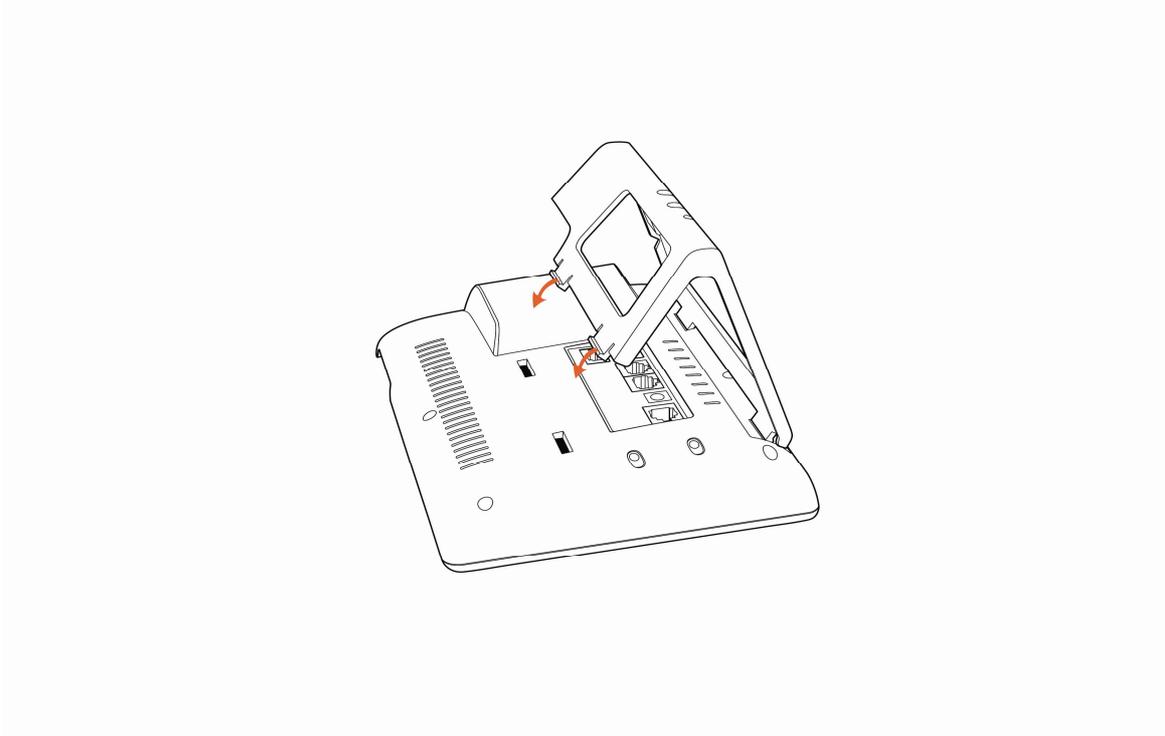


C. It is the right picture after fixing the stand bracket below:

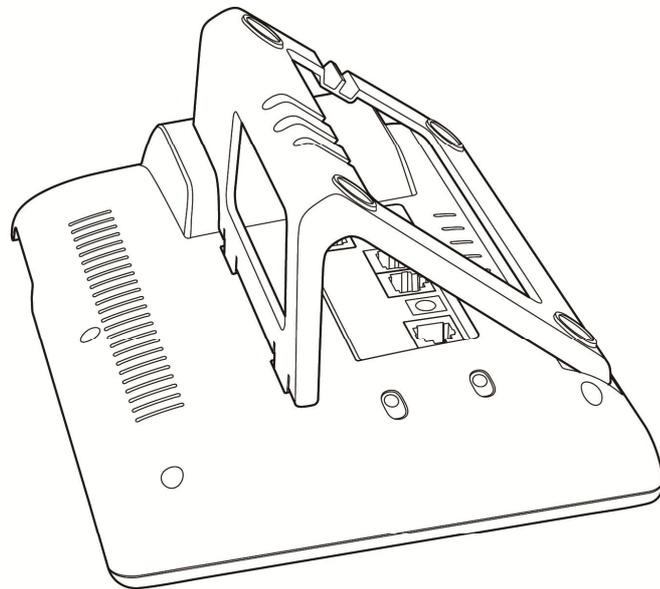


D. Disassemble the stand bracket:

Push the spring joint of stand and pull the stand according to the direction of the arrow. When the joints are pulled out of the slot, you can take off the stand bracket.

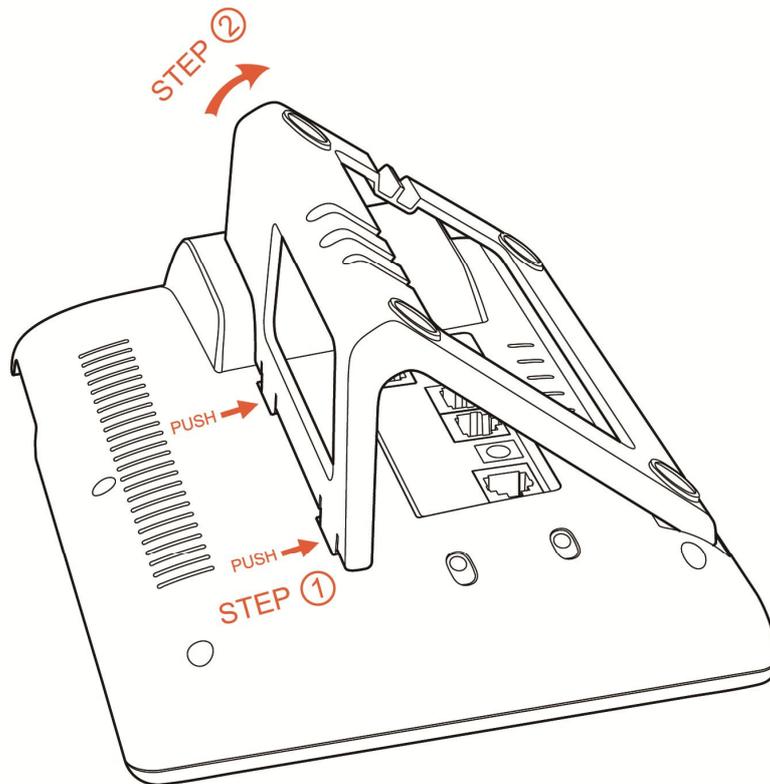

1.4 Programmable keys' paster using instruction

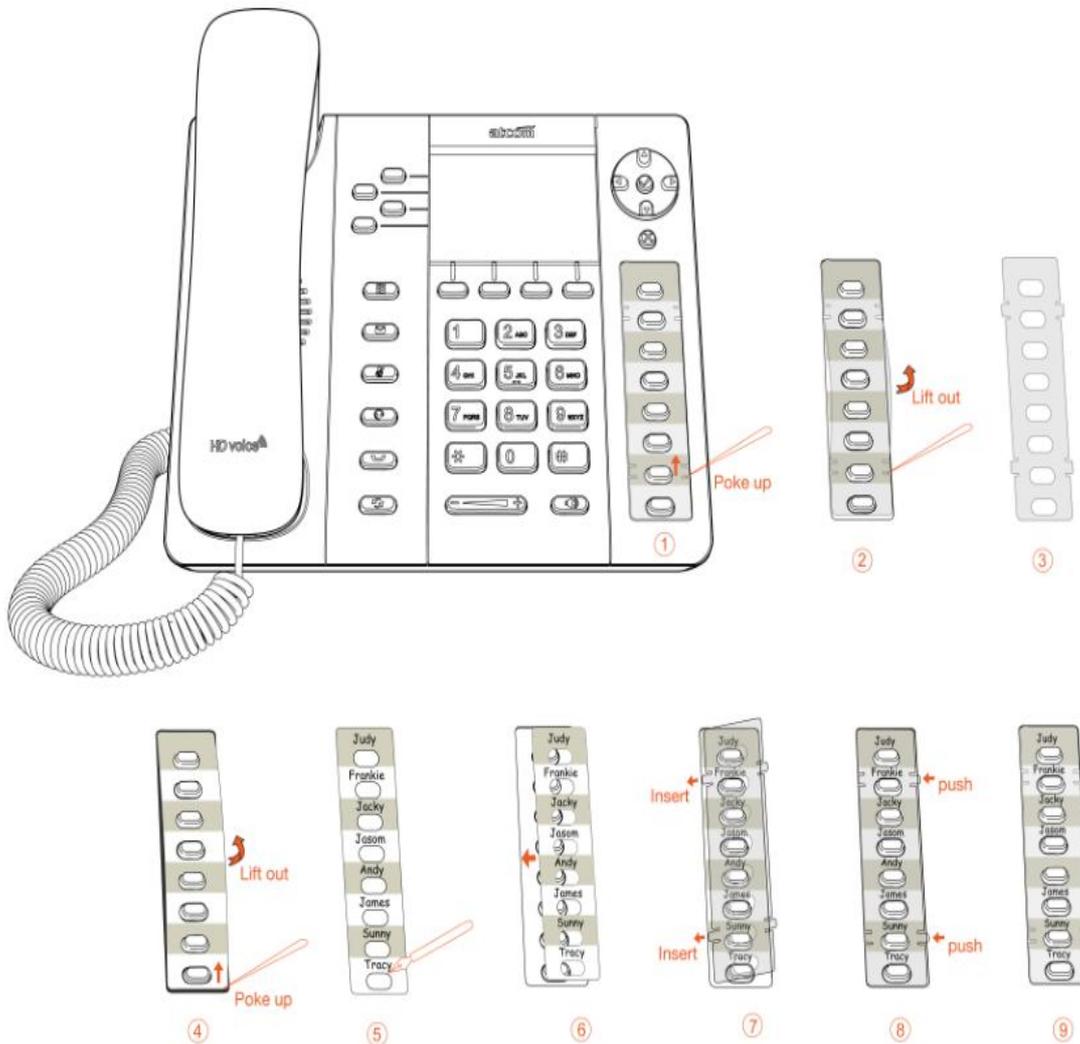

Step1. Use needle or some other tools to insert into the hole of the plastic sheet, hog the plastic sheet.

Step2. Lift out the plastic sheet

Step3. Take off the plastic sheet

Step4. Use needle or some other tools to insert into the edge of the paster, hog and lift out the paster

Step5. Write down the identification of each programmable key on the paster after taking off the paster


Step6. Put back the paster

Step7. Insert the plastic sheet into the slot

Step8. Push the other side of the plastic sheet into the other slot

1.4 Wiring instruction

After stand bracket fixed, please plug in all wires or cables as below:

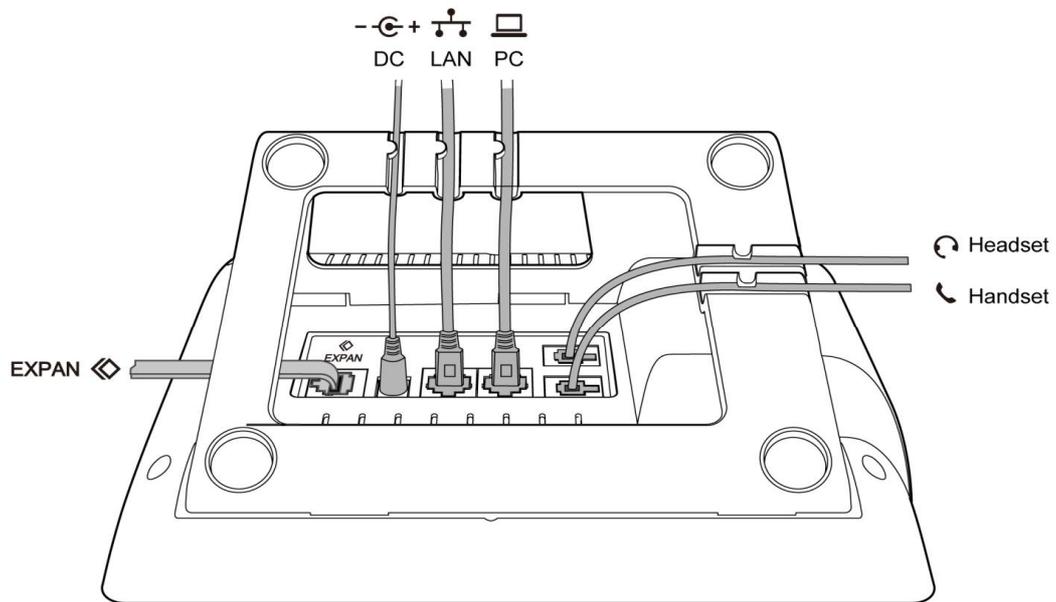

2. Configuring phone



R3(s)



R3(s) with Rainbow ET

2.1 Configuring via keypad

Language Setting: The default language of the phone is English, it supports Chinese, Russian, Arabic, German, French, Portuguese, Turkish, Spanish, Hebrew, Hungarian, Italian.

Press Menu- Setting- Basic Setting- Language to edit the language list, choose the one you'd like to set on the phone.

Note: The available language maybe different, it depends on the language packs currently loaded to the IP phone.

Network Setting:

Press Menu- Setting- Basic Setting- input default password 'admin'- Network-LAN Prot/ PC Port/ VLAN/Web server to enter the internet related configuration page.

Or review its current IP address by pressing  key when it is powered on and connected to the network.

Account Setting:

Press Menu- Setting- Basic Setting- input default password 'admin'- Account-Enter to configure the account setting. You can refer to the bellow 'Configuring via Web page' for the parameter details.

2.2 Configuring via Webpage


2.2.1 Login to web

Connect the PC and telephone in one network, input the IP address of telephone at a browser and press "Enter", you will be required to input the username and password to access the web page. The username/password as below:

Username	Password	Description
admin	admin	For Administrators
user	user	For General Users

2.2.2 Network Configuration


There are 3 options for network access.

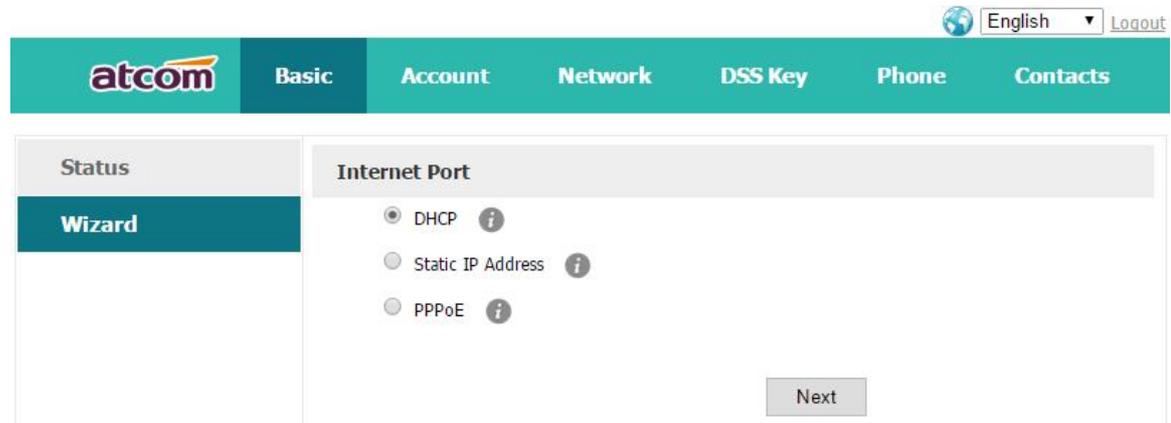

The screenshot shows the atcom web interface. At the top right, there is a language dropdown set to "English" and a "Logout" link. Below this is a teal navigation bar with the atcom logo and menu items: Basic, Account, Network, DSS Key, Phone, and Contacts. The main content area is divided into two sections. On the left, under "Status", the "Wizard" option is selected. On the right, under "Internet Port", there are three radio button options: "DHCP" (which is selected), "Static IP Address", and "PPPoE". Each option has an information icon (i) to its right. A "Next" button is located at the bottom right of the "Internet Port" section.

1.If chosen DHCP, the telephone will be assigned a IP address automatically, click the button "Next" to enter the web page of "Account Configuration".

2. If chosen Static IP, user should input the IP address manually for the telephone, click the button "Next" to enter the web page of "Static IP Address".

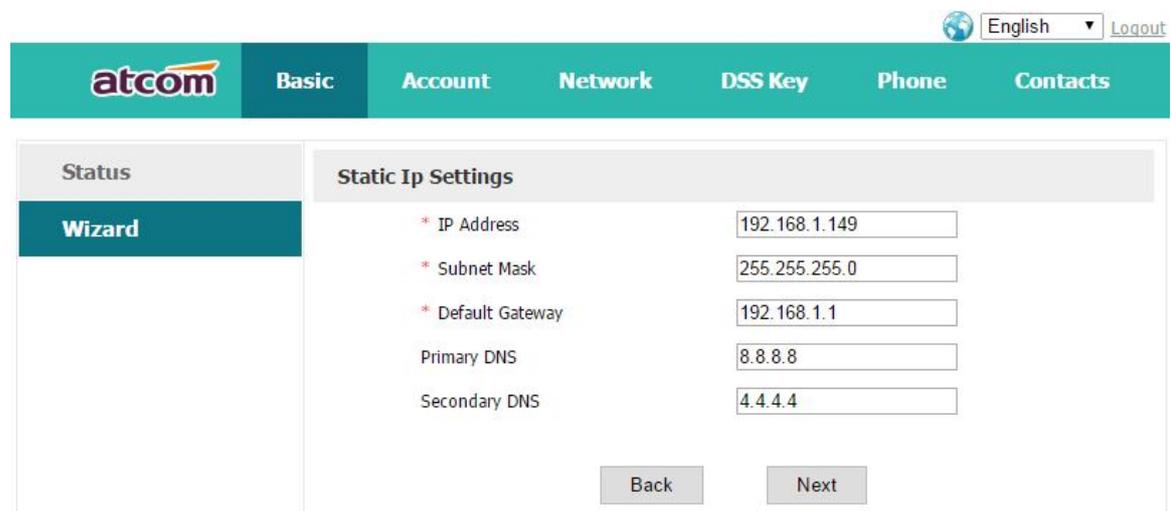

The screenshot shows the atcom web interface. At the top right, there is a language dropdown set to "English" and a "Logout" link. Below this is a teal navigation bar with the atcom logo and menu items: Basic, Account, Network, DSS Key, Phone, and Contacts. The main content area is divided into two sections. On the left, under "Status", the "Wizard" option is selected. On the right, under "Static Ip Settings", there are five input fields: "* IP Address" (192.168.1.149), "* Subnet Mask" (255.255.255.0), "* Default Gateway" (192.168.1.1), "Primary DNS" (8.8.8.8), and "Secondary DNS" (4.4.4.4). The asterisk indicates required fields. "Back" and "Next" buttons are located at the bottom of the "Static Ip Settings" section.

After IP address filled manually, click the button "Next" to enter the web page of "Account Configuration", or click the button "Back" to back to web page of "Network Configuration".

3.If chosen PPPOE, user should input the username/password (provide by ISP) of PPPOE manually and then click the button "Next" to enter the web page of "PPPOE",

English ▼ [Logout](#)

atcom Basic Account Network DSS Key Phone Contacts

Status	PPPoE Settings
Wizard	<p>* User <input type="text" value="pppoe"/></p> <p>* Password <input type="password" value="....."/></p> <p style="text-align: center;"><input type="button" value="Back"/> <input type="button" value="Next"/></p>

After the username/password of PPPoE filled manually, click the button "Next" to enter the web page of "Account Configuration", or click the button "Back" to back to web page of "Network Configuration".

Network Configuration can be completed in below webpage,


English ▼ [Logout](#)

atcom Basic Account **Network** DSS Key Phone Contacts

Basic	Internet Port
Advanced	<p><input checked="" type="radio"/> DHCP ?</p> <p><input type="radio"/> Static IP Address ?</p> <p>* IP Address <input type="text" value="192.168.1.1"/></p> <p>* Subnet Mask <input type="text" value="255.225.255.0"/></p> <p>* Default Gateway <input type="text" value="192.168.1.1"/></p> <p>Primary DNS <input type="text" value="8.8.8.8"/></p> <p>Secondary DNS <input type="text" value="4.4.4.4"/></p> <p><input type="radio"/> PPPoE ?</p> <p>* User <input type="text" value="pppoe"/></p> <p>* Password <input type="password" value="....."/></p> <p style="text-align: center;"><input type="button" value="Confirm"/> <input type="button" value="Cancel"/></p>

2.2.3 Account Configuration

The account configuration info will be saved to Line 1.

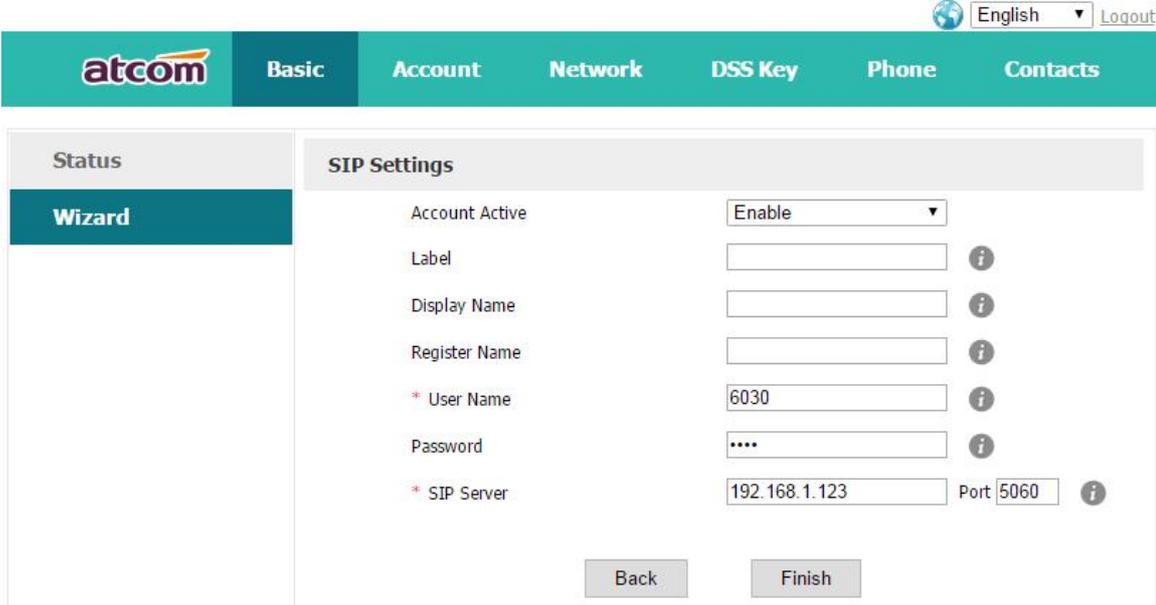

English ▼ Logout

atcom Basic Account Network DSS Key Phone Contacts

Status

Wizard

SIP Settings

Account Active

Label

Display Name

Register Name

* User Name


Password

* SIP Server Port

Back Finish

Click the button "Finish" to save network configuration and account configuration, and click "Back" back to the previous web page.

Account Configuration can be completed in below webpage,

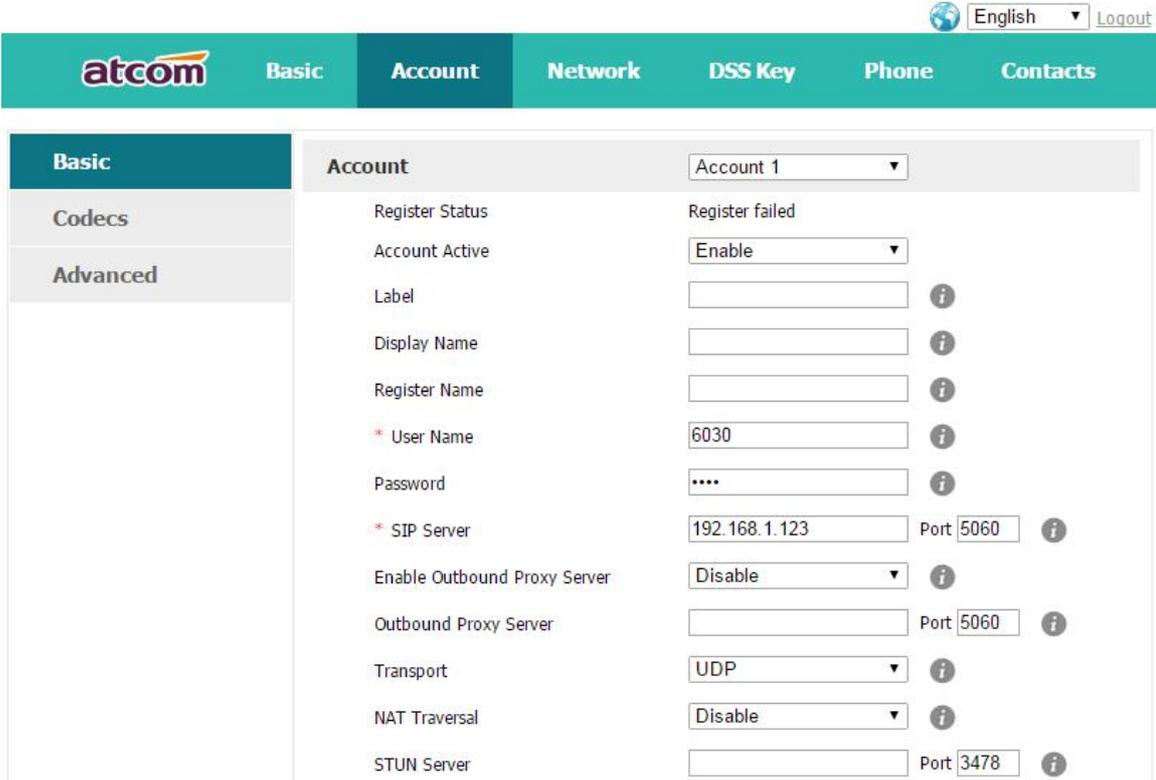

English ▼ Logout

atcom Basic Account Network DSS Key Phone Contacts

Basic

Codecs

Advanced

Account Account 1 ▼

Register Status Register failed

Account Active

Label

Display Name

Register Name

* User Name

Password

* SIP Server Port

Enable Outbound Proxy Server

Outbound Proxy Server Port

Transport

NAT Traversal

STUN Server Port

-
- ✓ Enable: whether enable this SIP register.
 - ✓ Label: The name of the displayed on the phone LCD.
 - ✓ Display Name: This name will display on the screen of R3. It will display the name configured for the SIP account by the SIP server preferentially. It can also be kept blank.
 - ✓ Register ID: normally is the same as User ID, can also be kept blank if there is no special requirement from the SIP server.
 - ✓ User ID: Username of SIP account.
 - ✓ Password: Password of SIP account.
 - ✓ Sip Server: SIP server address, support both IP address and domain name.
 - ✓ Sip Port: SIP server port, default is 5060.