

# **CT11(W) Quick Start Guide**

Version: 1.0

2017-3-7

# Content

1.	Installation and access .....	3
1.1	Connection .....	3
1.2	Connect the headset .....	4
1.3	Check IP .....	4
1.4	Enter the Setting of telephone .....	5
2.	Quick Configuration .....	5
2.1	Enter the Setting of phone .....	5
2.2	Account Configuration .....	7
3.	Login indicator .....	8

## 1. Installation and access

### 1.1 Connection


#### 1) Power on

1. Plug in the power jack with DC 5V/1000mA
2. All led will be lighted once and then turn off
3. After absolute boot up, login led will be lighted in red and come into standby mode.


#### 2) Connect to network

##### Connect network cable:

Look as below scene:

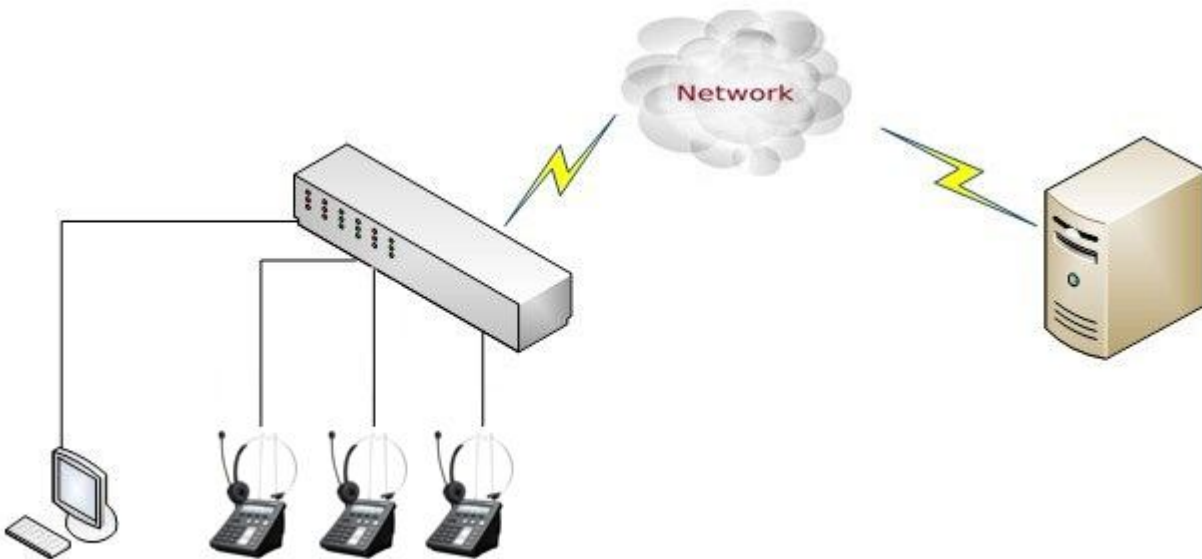


Plug in network cable at LAN port, the phone should obtain an IP address in default net settings, mostly like 172.16.0.54.

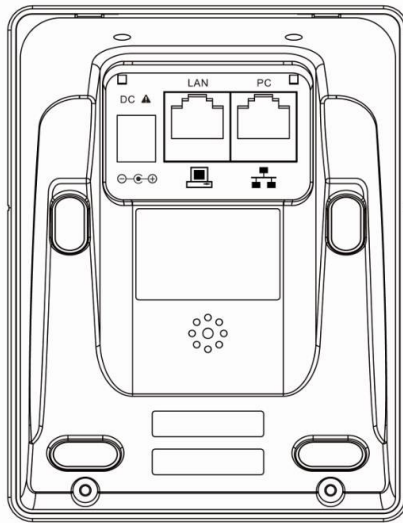

## 1.2 Connect the headset

Connect the RJ9 headset to the headset jack on the left side of the phone, The pin sequence of RJ9 port on the phone is like following picture:

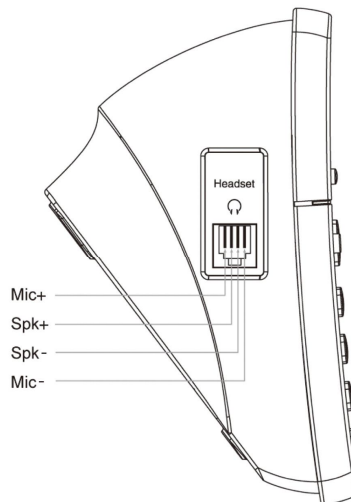

## 1.3 Check IP

The phone uses DHCP mode by default,  
Please press **"Menu"**→**"Status"** to check the IP address when it is powered on and connected to the network.

## 1.4 Enter the Setting of telephone

Connect the PC and telephone in one network, input the IP address of telephone at a browser and press "Enter", you will be required to input the username and password to access the web page. The username/password as below:

Username	Password	Description
admin	admin	For Administrators
user	user	For General Users

## 2. Quick Configuration


After login to the webpage, you're able to set the phone by quick configuration. Configure it quickly via Web: **"Basic"→"Wizard"**

User should set the below two parts in turn,

- 1.Network—LAN Port
- 2.Account—SIP

### 2.1 Enter the Setting of phone


There are 2 options for network access,

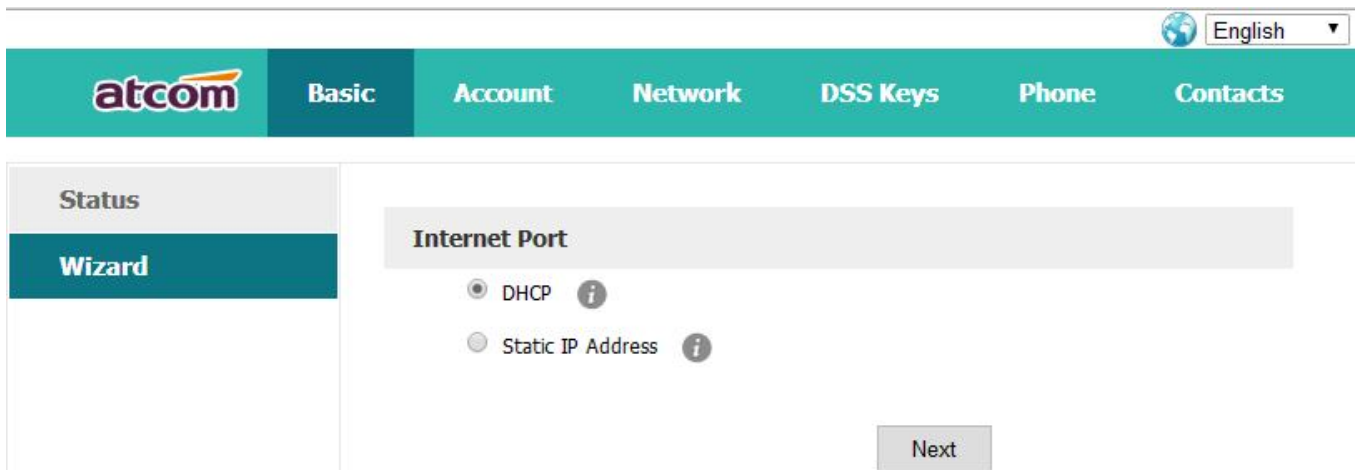

The screenshot shows the atcom web interface. At the top right, there is a language dropdown menu set to 'English'. Below it is a navigation bar with tabs: 'Basic', 'Account', 'Network', 'DSS Keys', 'Phone', and 'Contacts'. The 'Basic' tab is selected. On the left side, there is a sidebar with 'Status' and 'Wizard' options. The 'Wizard' option is selected. The main content area displays the 'Internet Port' configuration screen. It has two radio buttons: 'DHCP' (which is selected) and 'Static IP Address'. Each radio button has an information icon (i) next to it. At the bottom right of the configuration area, there is a 'Next' button.

1.If chosen DHCP, the phone will be assigned a IP address automatically, click the button "Next" to enter the web page of "Account Configuration".

2.If chosen Static IP, user should input the IP address manually for the phone, click the button "Next" to enter the web page of "Static IP Address".

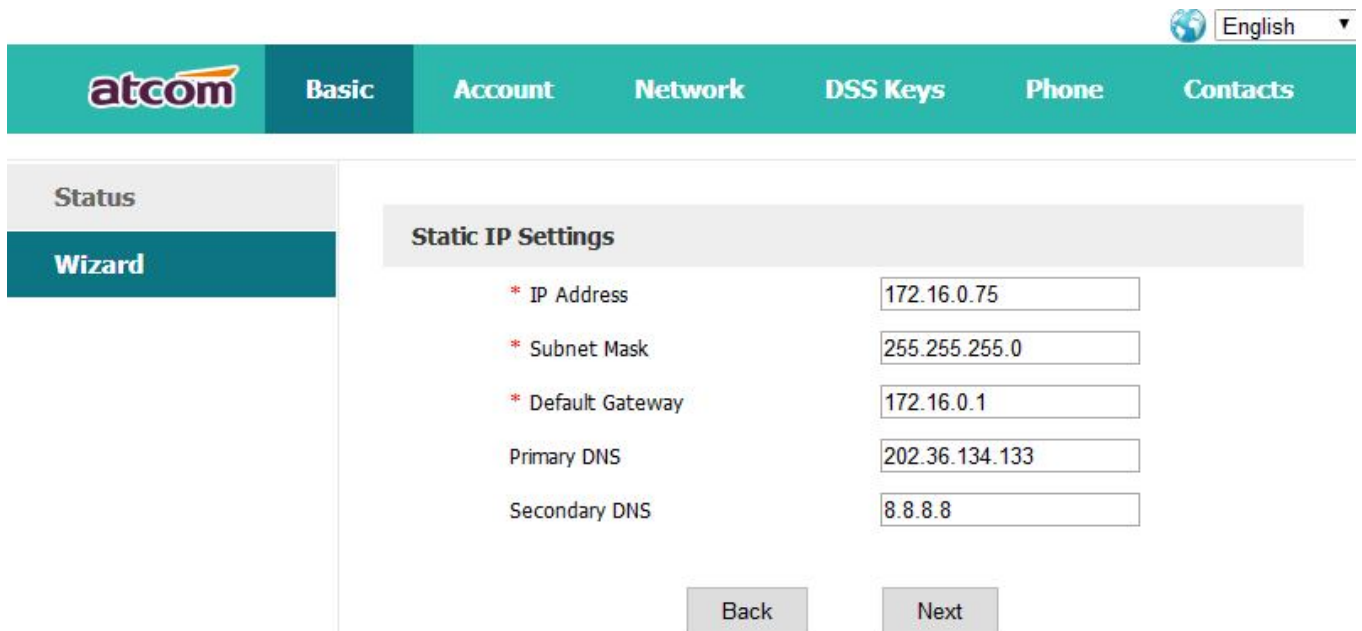

Static IP Settings	
* IP Address	<input type="text" value="172.16.0.75"/>
* Subnet Mask	<input type="text" value="255.255.255.0"/>
* Default Gateway	<input type="text" value="172.16.0.1"/>
Primary DNS	<input type="text" value="202.36.134.133"/>
Secondary DNS	<input type="text" value="8.8.8.8"/>

After IP address filled manually, click the button "Next" to enter the web page of "Account Configuration", or click the button "Back" to back to web page of "Network Configuration".

Network Configuration can be completed in below webpage:

Via web **"Network"**→**"Basic"**

- Basic
- Wi-Fi
- Advanced

### Internet Port

DHCP *i*  
 Static IP Address *i*

\* IP Address   
 \* Subnet Mask   
 \* Default Gateway

Static DNS  Off  On *i*

Primary DNS   
 Secondary DNS

## 2.2 Account Configuration

The account configuration info will be saved to Line.

- Status
- Wizard**


### SIP Settings

Account Active  *i*  
 Label  *i*  
 Display Name  *i*  
 Register Name  *i*  
 \* User Name  *i*  
 Password  *i*  
 \* SIP Server  Port  *i*

Click the button "Finish" to save network configuration and account configuration, and click "Back" back to the previous web page.

Account Configuration can be completed in below webpage:

Via web "Account"→"Basic"

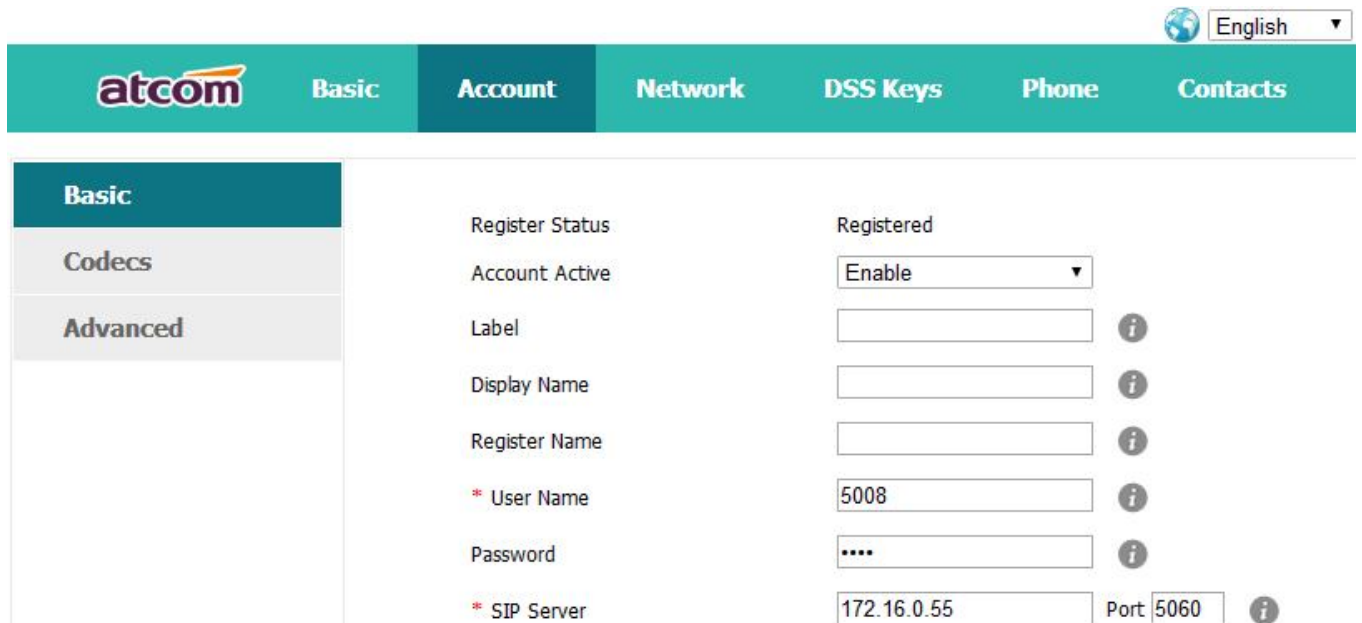

English

atcom Basic Account Network DSS Keys Phone Contacts

Basic

Codecs

Advanced

Register Status Registered

Account Active Enable

Label

Display Name

Register Name

\* User Name 5008

Password \*\*\*\*

\* SIP Server 172.16.0.55 Port 5060

### 3. Login indicator

Login indicator	Status
Red/flashing	Network disconnected
Red/stable	SIP unregister
off	SIP register ok